

- All Operaters must use an ADD On Receiver

Changing Parameters, refer to **page 11** of the Manual

- Press **Enter** to go to **BASIC SETTINGS**.
- Use **+** and **-** to scroll **up and down** respectively.
- Press **ESC** to exit.



Step through menu on page 12 & 25 of Manual.

- Place **Gate halfway**
- If not using **Safety devices** – change **all** items in **Safety** to **not active** - Page 12.
- **Opening direction** left or right – default is **left..**
- Using **Auto close** (in Operating Mode) it's recommended to set Impulse button to **OPEN**
- Press **ESC twice** to start **programming** (system test) then **Press** the **transmitter** – Page 25
- Check **Force & ARS** response time - adjust accordingly – Page 12.
- Increasing ARS **reduces sensitivity**. 0.5 - **0.95**
- Connect **Battery** last.

Quick connections:

Push Button	No.30 & 32 (For Hold Open-Set Impulse button to <u>OPEN</u>)
Photocell contact	No.45 & 46
Accessory power supply 24v	Use Labelled Connector (No.16- & 17+) <u>Max.500ma.</u>
<u>Solar Only</u> Photocell power supply 24v	No.40 + & 43 -

06/07/2023